

# KTH400

## Temperature and Humidity Transmitter

### ≡ Description

KTH400 series economical temperature and humidity transmitters are wall mounted and air duct mounted. The newly designed housing minimizes installation costs and provides excellent protection against pollution and condensation. The output signal can be voltage or current and RS485 signal.

### ≡ Features

- More compact housing, suitable for narrower installation space.
- $\phi 6$ mm stainless steel probe
- IP65 / NEMA 4 Protection
- 4-20mA, 0-10V, 0-5V, RS485 output available

### ≡ Applications

- HVAC system
- Greenhouse
- Food transportation
- Cold storage and refrigeration
- Clean room environment monitoring



### ≡ Technical Data

Model	KTH400
Power supply	16-30V DC (2 wire 4-20mA) / 16-30V AC or V DC ( 0-5V/0-10V/RS 485 )
Output	4-20mA / 0-5V / 0-10V/ RS 485
Operating temp	-35 ... +70°C
Storage temp	-40 ... +60°C
Operating humidity	0 ... 100 %RH
Maximum wind / flow speed	30 m/s
Electromagnetic compliance	EN61326-1, Industrial Environment
Housing material	PC+ABS (UL-V0 approved)
Ingress protection	IP65 / NEMA 4
Cable gland	M16*1.5
Measurement performance-Temperature	
Measurement range	-35 ... +80 °C
Accuracy	$\pm 0.3^{\circ}\text{C}$ (20-60°C)
Temperature dependence	$\pm 0.01^{\circ}\text{C}/^{\circ}\text{C}$
Measurement performance-Humidity	
Measurement range	0 ... 100 %RH
Accuracy	$\pm 2\%$ (0-90% @25°C) / $\pm 3\%$ (90-100% @25°C)
Stability in typical HVAC applications	$\pm 1\%$ RH/year

### ≡ Notes On Disposal



Most Keram Controls products may contain valuable materials that should be recycled rather than treated as domestic waste. Please pay attention to the relevant regulations of local disposal.


### ≡ Product Certification



Declaration of conformity

The declaration of conformity of the products can be found on our website [https://: www.keramcontrols.com](https://www.keramcontrols.com)

## Dimensions (mm)

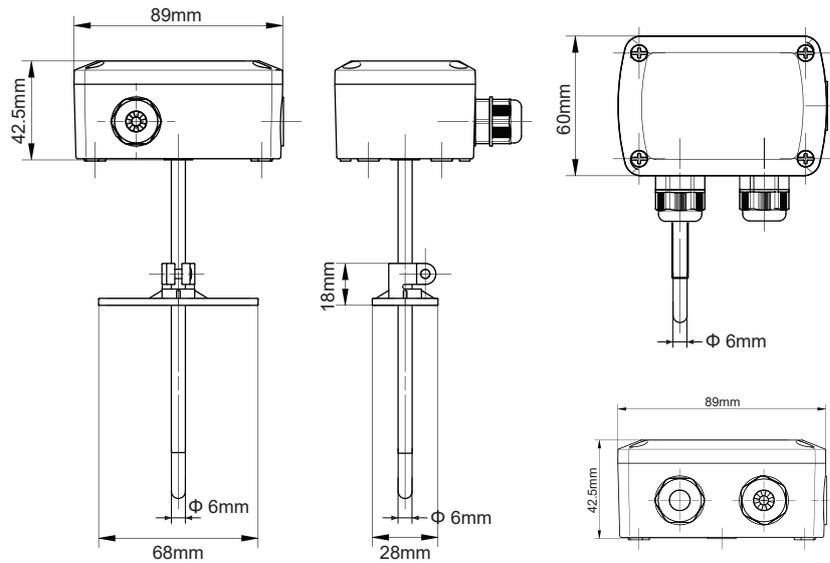

## Measuring Range Adjustment

<b>ON</b> 1 2	<b>ON</b> 1 2	<b>ON</b> 1 2	<b>ON</b> 1 2
-35 ... +75°C	-35 ... +35°C	0 ... +50°C	0 ... +80°C

## Output Setting (3-wire Model)

<b>ON</b> 3 4	<b>ON</b> 3 4	<b>ON</b> 3 4
<b>0-5V</b>	<b>0-10V</b>	<b>4-20mA</b>



To configure the transmitter, it must not be energized. Then, you can make the settings required, with the DIP switches. When the transmitter is configured, you can power it up.

## Ordering Guide

KTH400	Output		Installation		Filter	
Model	Output		Installation		Filter	
KTH400	4-20mA(2-wire)	(E)	Wall	(W)	PTFE	(P)
	4-20mA(3-wire)	(F)	Duct	(D)		
	0-5V/0-10VDC(3-wire)	(G)				
	RS-485	(H)				

## Order Examples

### KTH400-FWP

<b>Model</b>	KTH400 Temperature and Humidity Transmitter
<b>Output</b>	4-20mA
<b>Installation</b>	Wall-mounted
<b>Filter</b>	PTFE